

## DOCUMENTS

### DOCUMENTS ENCLOSED WITH THE UNIT

Each unit is delivered complete with the following documents:

- Air-conditioner installation - user and maintenance manual;
- Instruction manual for the microprocessor controller;
- Wiring diagram;
- List of spare parts;
- CE declaration with list of European directives and standards that the unit is compliant with;
- Warranty conditions.

## DIRECT EXPANSION UNIT CONFIGURATION

Options	Models			Capacity		Version
	A	X	O	2	9	BASIC
Description						

Option 1	MODELS	AX	Direct expansion - air cooled
		AW	Direct expansion - water cooled
		AD	Dual Fluid - air cooled
		AT	Dual Fluid - water cooled
		AF	Free Cooling - water cooled
Option 2	AIR FLOW	O	Over Flow
		U	Under Flow
Option 3	CAPACITY	07	7 kw
		10	10 kw
		15	15 kw
		18	18 kw
		20	20 kw
		26	26 kw
		29	29 kw
		30	30 kw
		39	39 kw
		40	40 kw
		50	50 kw
		55	55 kw
		60	60 kw
Option 4	VERSION	BASIC	Units without condensing pressure control
		MOD	AX_AD Units with outdoor unit fan speed control
		MOD.A	AW_AT_AF Units with outdoor unit fan speed control
		MOD.B	AW_AT Units with condensing pressure control by pressure control valve
		LT	Units for low outside temp. (-45°C) with condensing pressure control by outdoor unit fan speed control.